

///ArcLED

Seamless LED Strip USER INSTRUCTION

1. The most suitable operation temperature shall be -25°C to 45°C .
2. Please make sure that even during installation, the predetermined bending direction will never change. The product is TOP bending only, and it can't be twisted or side bending.
3. Our Seamless range shall not be bent sharply or it may cause product damage.
4. The minimum bending diameter is 60mm, over bending will damage and void any warranty.
5. During the installation, Our seamless range can not be:
 - Twisted
 - Dropped
 - Bent at a 90° angle or bent at all
 - Sagging/Hanging down
6. For installation, 3 ways for your selection:
 - Back tape
 - Mounting clips
 - Aluminum profile



7. Please do not connect the LED strip beyond the maximum connecting length.

8. If LED strips are equipped with a self-adhesive tape for attaching the LED strip to suitable materials, such as aluminum profiles, which must be clean and free of oil or silicone coatings, as well as other dirt/dust particles. The adhesive tape is intended for single use and if removed may damage the material to which it is stuck and the LED module itself, which must then be scrapped.


Warranty: All LED strip are warranted to be free from defects in product itself from the date of purchase.

Within this period, we, at its sole option, repair or replace any components which fail from correct use. Such repairs or replacement will be made at no charge to the customer for parts only, provided that the customer shall be responsible for transportation cost of the goods.

This warranty does not cover failures due to abuse, misuse, improper handling, act of nature, negligence, normal wear, accidental damage, modifications or repairs made by the purchaser or incorrect voltage conditions.

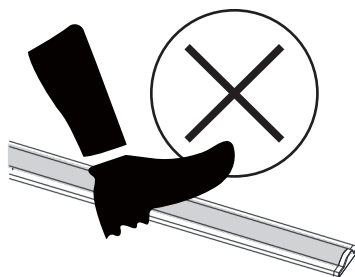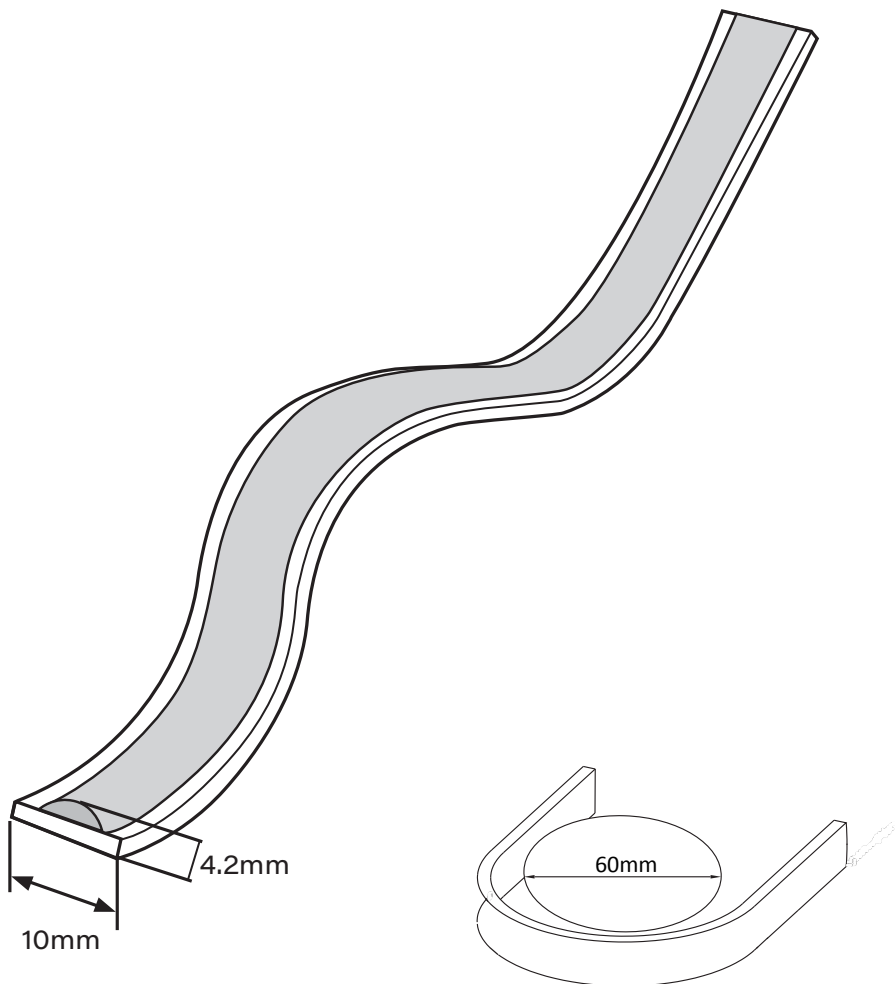


Prohibit trample

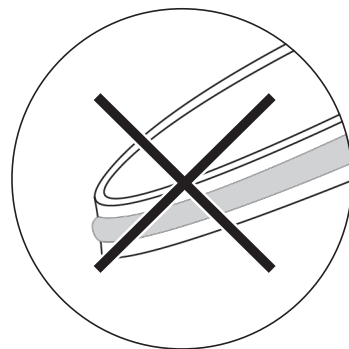


Small Angle bending is prohibited



Do not twist the light

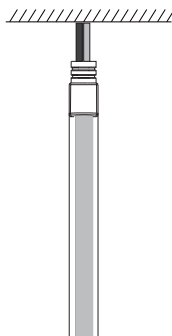


Do not suspend the power cable

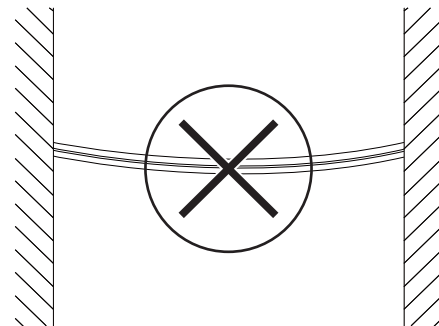


Do not leave the light hanging in the air


Installation with back tape

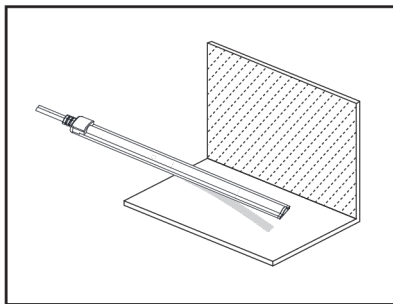

1.Remove the strip from the packaging box and tear off the tape on the back.

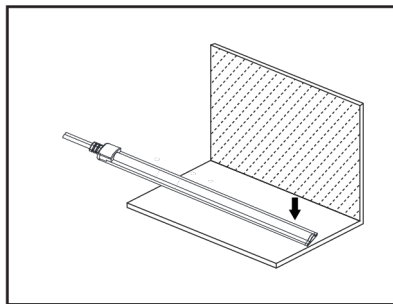


2.Install the strip where you need it (ensure the wall is smooth), refer to the installation distance diagram for the specific glowing effect, and stick it firmly.

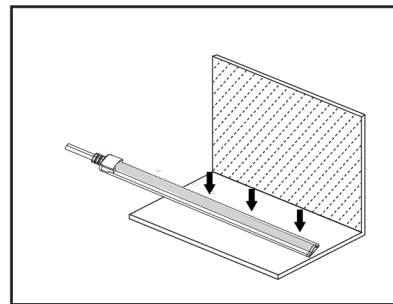


3.Connect the strip to the DC24V driver and energize it.


Installation with mounting clip

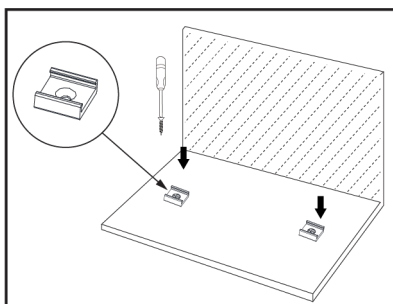

1. Remove the mounting clips and screws from the packing box, and use a screwdriver to install these clips where needed.

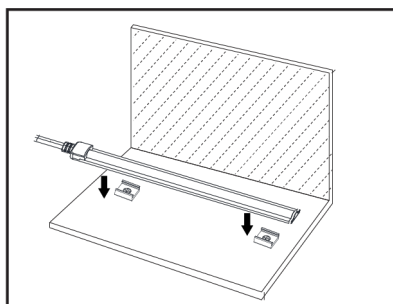


2. Take the strip out of the box, then put the strip into the clips and secured it (refer to the installation distance diagram for the specific glowing effect).

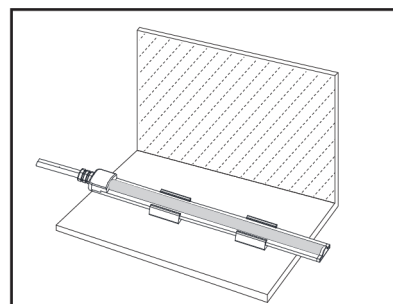


3.Connect the strip to the DC24V driver and energize it.


Installation with aluminum profile

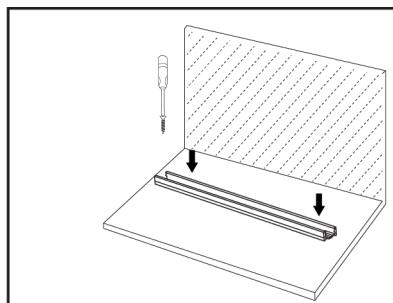

1.Place the profile where needed, and use a screwdriver to install the profile where needed.

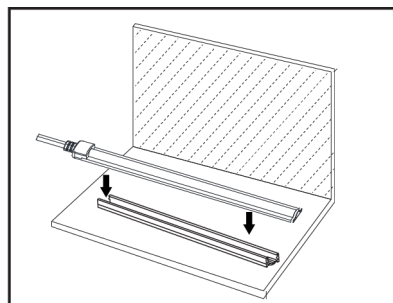

2.Remove the strip from the package box, then put the strip into the profile and secured it

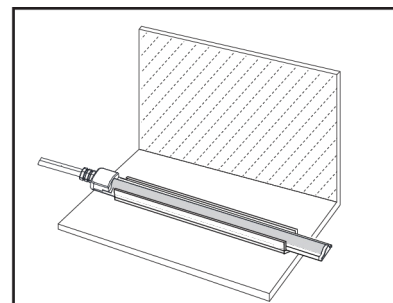

3.Connect the strip to the DC24V driver and energize it.